


# Quick Reference Guide



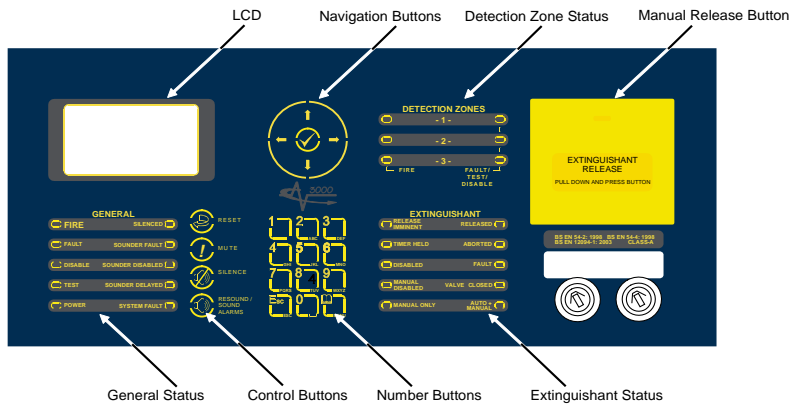


# ExGo Series

In the event of a fire alarm, call: -  
**TEL:**  
 For Service & Maintenance,  
 contact: -  
 \_\_\_\_\_  
 \_\_\_\_\_

## Controls and Indications




### Navigation Buttons

-   Press to scroll through Menu Options.  
Press to display more information.
-   Press to scroll through menu Options.  
Press to scroll through lists of zones or devices.
-  Press to confirm entry of numeric information entry.  
Press to confirm selection of a menu option.  
Press to change some of the configuration options.

### Graphic Display

The graphical display provides detailed information of the source of fires, faults and warnings. It also shows menus for use when inspecting or programming the operation of the panel.


Under normal conditions the panel display shows the time, date and status: -

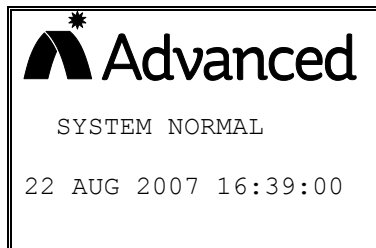




The display will automatically change to show detailed information on events and on the operating status condition of the panel.

A typical Menu is shown

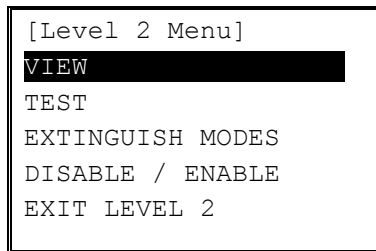



The main User functions are VIEW, TEST, DISABLE & ENABLE.



### Number Buttons

-  Used to enter numbers.
-  Press to exit the menu functions and return to the normal display.
-  Press to show or return to Menu Functions.

### Control Buttons

-  **Reset**  
Press to reset the panel from a fire alarm condition and/ or a gas release sequence.
-  **Mute**  
Press to mute the internal buzzer.
-  **Silence**  
Press to silence the sounders.
-  **Resound / Sound Alarms**  
Press to re-activate the sounders.  
Press to initiate a manual evacuation and sound the alarms.

### LED Status Indicators

The LED Status indicators are divided into three blocks of information:

**GENERAL STATUS** provides common information.

**ZONE STATUS** provides information on the detector circuits.

**EXTINGUISHING STATUS** provides specific information on the extinguishing controls

- RED** Separate LED Indicators show the presence of a fire alarm condition and the release status of the extinguishing controls.
- YELLOW** Indicate other system operating conditions including Fault, Test and Disablement conditions.
- GREEN** Indicates the presence of power to the system.

Refer to the User Manual (Document Number 680-148) for full operating instructions.