



# BASIC OPERATING INSTRUCTIONS

## 2, 4 or 8 Zone Fire Control Panel

PRODUCT CODE  
TC802 TEC804 TEC808

### SYSTEM DESCRIPTION

#### ZONE ALARM

- The Red FIRE LED will flash together with red Zone LED. External sounders and internal buzzer will sound.

##### Reaction

- Press SILENCE ALARM.
- The external sounders will silence, but the buzzer will continue to sound. The FIRE LED will change from flashing to steady.
- Press SILENCE BUZZER twice.
- At the first push of SILENCE BUZZER, this changes to intermittent and on the second push of SILENCE BUZZER, it is then silenced.
- Investigate or evacuate: Press SOUND ALARM (the external sounders will resound).

#### ZONE FAULT

- Yellow ZONE FAULT LED on
- Internal buzzer will sound

##### Reaction

- Press SILENCE BUZZER twice
- At the first push of SILENCE BUZZER, this changes to intermittent and on the second push of the SILENCE BUZZER, it is then silenced.
- Investigate problem.
- LED will switch off once problem has been rectified.

#### SYSTEM FAULT


- The Yellow GENERAL FAULT LED is on, the internal buzzer will sound. A second external or internal Yellow LED will illuminate indicating the type of fault.

##### Reaction

- Press SILENCE button.
- At the first push of SILENCE BUZZER, this changes to intermittent and on the second push of the SILENCE BUZZER, it is then silenced.
- Investigate problem.
- LED will switch off once problem has been rectified.

#### NORMAL CONDITION

- Green POWER SUPPLY LED on.
- All other LEDs off.

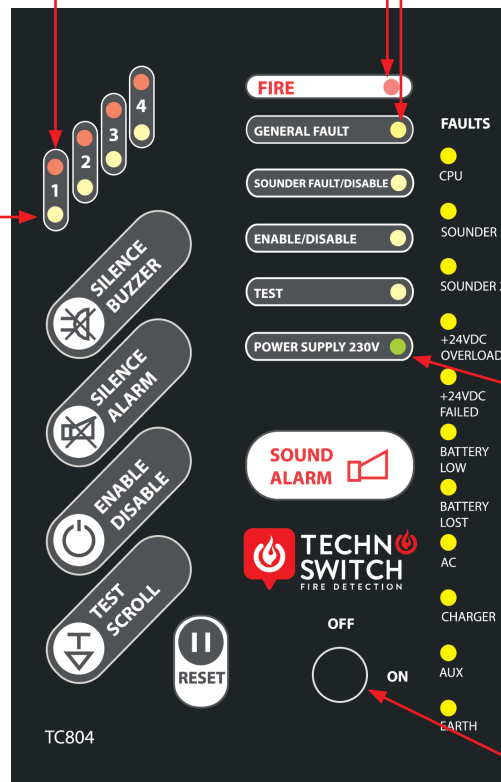

Front Membrane of the TC804

#### KEY SWITCH

- To activate all buttons, except the SILENCE BUZZER which is always active, the key switch must be ON.

### CONTROL BUTTONS

#### SILENCE BUZZER

Used to silence internal buzzer

#### SILENCE ALARM

Used to silence external sounders (Key switch must be ON)

#### ENABLE / DISABLE

Engineer's Facility - Enable or disable zones and sounders (Key switch must be ON)

#### TEST SCROLL

Engineer's Facility - Locate required zone number (Key switch must be ON)

#### RESET

Engineer's Facility - Reset condition/confirm choice (Key switch must be ON)

#### SOUND ALARM

Manual alarm activation (Key switch must be ON)

• **DISCLAIMER:** Although the contents of our product literature have been prepared with the greatest care, Technoswitch can accept no liability whatsoever for any direct or indirect damages of any kind that may arise due to either errors or omissions in them, or amendments to products or other specifications following publication.

© Technoswitch (Pty) Ltd



**HEAD OFFICE — JOHANNESBURG**  
Cussonia Park, 3 Ridge Road, Laser Park, Johannesburg T +27 (0)11 794 9144 E info@technoswitch.co.za  
**CAPE TOWN** T +27 (0)21 948 4575 ■ **DURBAN** T +27 (0)31 266 8843

**www.technoswitch.co.za**