
PRODUCT CODE
ORYX202, ORYX204, ORYX208

Level 1 Access

Allows SILENCE BUZZER operation only (CONTROLS ENABLED: Yellow LED Off)

Level 2 Access

Allows full control (CONTROLS ENABLED: Yellow LED On)

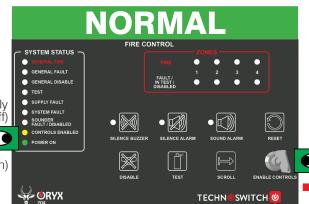


ORYX204 4 Zone Fire Panel Membrane

■ Level Access Control Switch
Turn clockwise

to access Level 2



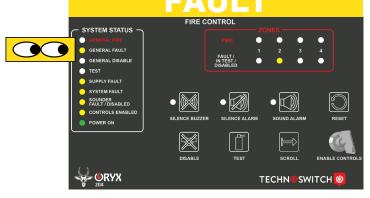

STEPS

NB: Controls must be enabled to perform SILENCE ALARM and RESET.

- 1. Press SILENCE BUZZER:
 - Internal buzzer will silence.
 - Fire LEDs will flash.
 - The SILENCE BUZZER indication LED (yellow) will switch on.
- 2. Press SILENCE ALARM:
 - Sounders will silence.
 - The SILENCE ALARM indication LED (yellow) will switch on.

VERIFY FOR FIRE OR A FALSE ALARM -

IF FIRE CONDITION

- 1. Press SOUND ALARM:
 - Sounders will re-activate.
 - The SOUND ALARM indication LED (yellow) will switch on.
- 2. Contact Emergency Services.
- 3. Follow your standard Emergency Evacuation Procedure.

IF FALSE ALARM

Once a false alarm has been confirmed:

Press RESET and the panel will return to Normal state.

NB: Reset can only be performed if controls are enabled.

STEPS

IF FAULT CONDITION

- 1. Press SILENCE BUZZER
 - Internal buzzer will silence.
 - Fault LEDs will flash.
- 2. Identify the Fault condition on the panel membrane.
- 3. Contact your service provider.

EMERGENCY CONTACT DETAILS (place sticker here)

 SERVICE PROVIDER CONTACT DETAILS (place sticker here)

• DISCLAIMER: Although the contents of our product literature have been prepared with the greatest care, Technoswitch can accept no liability whatsoever for any direct or indirect damages of any kind that may arise due to either errors or omissions in them, or amendments to products or other specifications following publication.

