









Silence internal buzzer.

The "FIRE" LED will change from flashing to steady.





ENTER USER CODE

STEP 3

Inspect area or zone for a fire or a false alarm.

IF FIRE











ENTER USER CODE







ENTER USER CODE

If a false alarm, press SILENCE to silence the sounders and RESET to clear the alarm condition and restore the panel to normal operation, entering user code when requested.

21:41 01 MAY 2022 FIRE Go FIRE ROUTING 11 FIRE ROUT

STEP 1





Silence internal buzzer.

The "FAULT" LED will change from flashing to steady.

The display will show the current date and time, the service call number, and the fault indication.





Use the toggle arrows to obtain additional information to be displayed on the screen.





Press the ESC key to return to the previous

If no button is pressed for one minute, the display will revert to the main display.

