



BASIC OPERATING INSTRUCTIONS

TEC601 Fire Control Panel

PRODUCT CODE
TEC601

SYSTEM DESCRIPTION

A number of fire detection devices are wired into zones. The fire control panel monitors the circuits of three detection zones and will react on detecting either a fire or a fault condition within a zone. Zones one and two are allocated to the extinguishant release, with both these in alarm and the keyswitch control set to auto-release the control panel will first indicate the automatic extinguishant release has been initiated and after a time delay (15 seconds) the extinguishant will release.

FIRE CONTROL

ZONE ALARM

- RED ZONE FIRE LED flashing, system sounder operating.

Reaction

- Press SILENCE ALARM button (System sounder will silence, flashing LED will remain steady)
- Investigate or evacuate

ZONE FAULT

- Yellow ZONE FAULT LED flashing internal panel buzzer operating

Reaction

- Press SILENCE BUZZER button (Panel buzzer will silence; Flashing LED will remain steady)
- Investigate problem

DISABLE ZONE

Used in conjunction with zone number to disable zone (isolate plus zone number to de-isolate)

CONTROL BUTTONS

- SILENCE BUZZER** Silences internal buzzer
- SILENCE ALARM** Silences system sounder
- RESET** Resets zone alarms, zone faults, or system faults


Disclaimer

Although the contents of our product literature have been prepared with the greatest care, Technoswitch can accept no liability whatsoever for any direct or indirect damages of any kind that may arise due to either errors or omissions in them, or amendments to products or other specifications following publication.

SYSTEM STATUS

NORMAL CONDITION

- Green POWER ON LED and AHU SUPPLY ON LED steady. All other LEDs off.

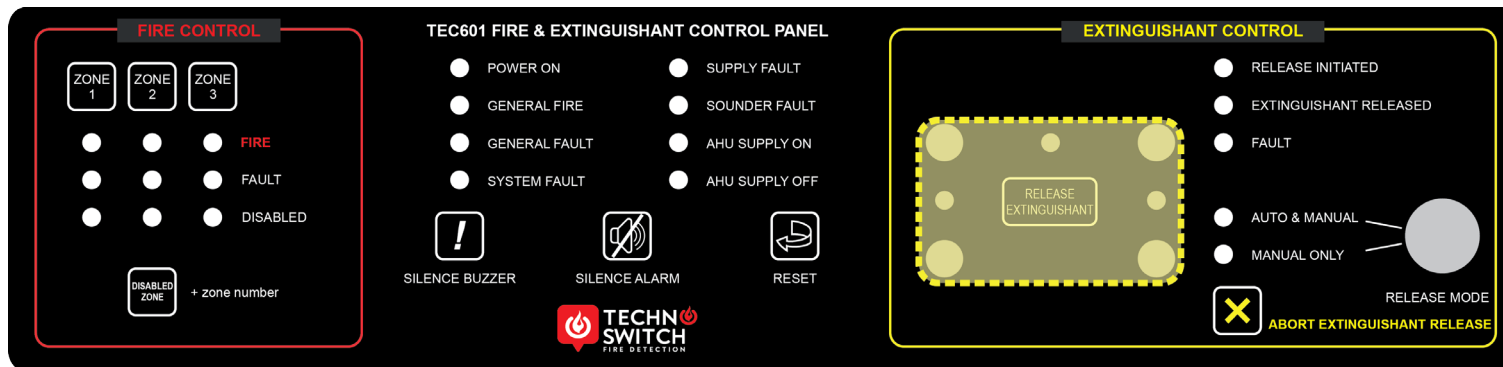

SYSTEM STATUS LEDs

- GENERAL FIRE LED** A fire has been detected
- GENERAL FAULT LED** Comes on with any fault condition
- SYSTEM FAULT LED** There is a technical fault
- SUPPLY FAULT LED** There is a power fault
- SOUNDER FAULT LED** There is a fault on the sounder circuit
- AHU SUPPLY ON LED** The AHU is connected
- AHU SUPPLY OFF LED** The AHU has been cut off

EXTINGUISHANT CONTROL

RELEASE INITIATED

- LED indicates that the extinguishant release cycle has been initiated.

A time delay of 15 seconds will pass before the discharge signal is sent.

EXTINGUISHANT RELEASED

- LED indicates that extinguishant discharge has taken place.

FAULT

- LED indicate that there is an open or short circuit fault on this circuit.

KEYSWITCH

- Selects between AUTO and MANUAL extinguishant release mode.

Pressing the "X" button aborts the release.

Pulling the Yellow Cover down and pressing the "Release Extinguishant" will initiate the release of the extinguishant regardless of what release mode you are in.