




BASIC OPERATING INSTRUCTIONS

RHINO103 EXTINGUISHING PANEL REPEATER

PRODUCT CODE
RHINO103-R

■ Level 1 Access

Allows SILENCE BUZZER operation only
CONTROLS ENABLED: Yellow LED Off

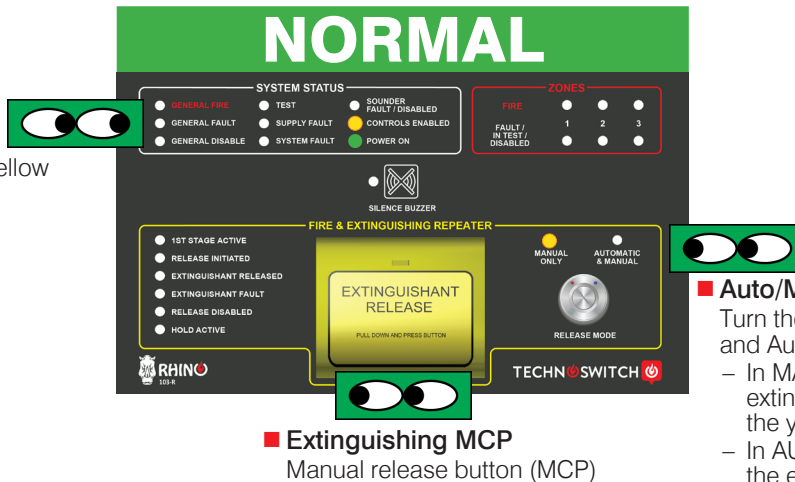


■ Extinguishing MCP

Manual release button (MCP)

■ Auto/Manual Key Switch

Turn the key to toggle between Manual and Auto & Manual modes.

- In MANUAL ONLY mode, the extinguishant can only be released via the yellow extinguishing MCP.
- In AUTOMATIC & MANUAL mode, the extinguishant will be released via the detection zones or the yellow extinguishing MCP.

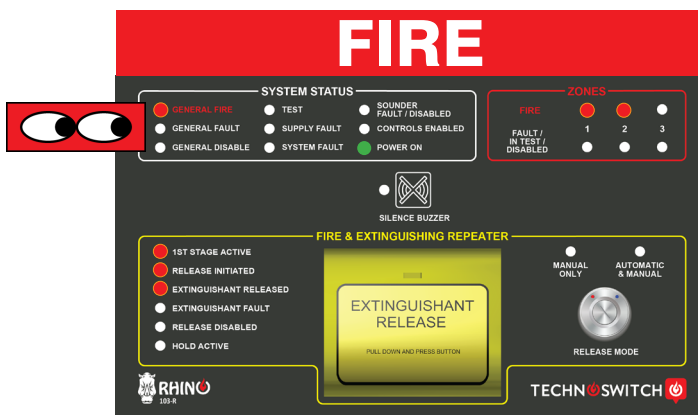


STEPS

NB: The extinguishant release sequence will vary depending on the configuration of the system.

1. Press **SILENCE BUZZER**:
 - Internal buzzer will silence.
 - The SILENCE BUZZER's yellow LED will switch on.
2. The system can only be silenced and reset from the RHINO103 Extinguishing Control Panel.

■ EMERGENCY CONTACT DETAILS

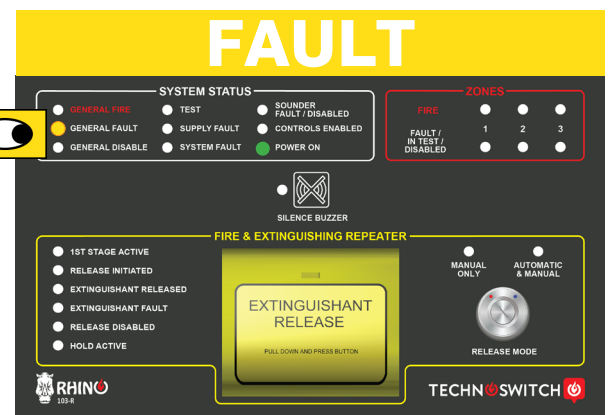

STEPS

IF FAULT CONDITION

1. Press **SILENCE BUZZER**.
2. Identify the **FAULT** condition on the panel's membrane.
3. Contact your service provider.

■ SERVICE PROVIDER CONTACT DETAILS

■ **DISCLAIMER:** Although the contents of our product literature have been prepared with the greatest care, Technoswitch can accept no liability whatsoever for any direct or indirect damages of any kind that may arise due to either errors or omissions in them, or amendments to products or other specifications following publication. E&OE