





### STEP 1





Silence internal buzzer ("Fire" LED will change from flashing to steady).

#### STEP 3

Inspect (Fire or False Alarm?



# **FIRE**





**ENTER USER CODE** 



### STEP 2





ENTER USER CODE

### **FALSE ALARM**





#### **ENTER USER CODE**

If False Alarm, press SILENCE to silence sounders and RESET to clear alarm condition and restore panel to normal operation, entering user code when requested.



### STEP 1





Silence internal buzzer ("Fault" LED will change from flashing to steady).

Display will now show current time, date and service call number along with the indication of the fault.

## STEP 2





#### STEP 3

Use the toggle arrows to obtain additional information to be displayed on the screen.





Press ESC key to return to previous menu.

If no button pressed for one minute, display will revert to main display.

DISCLAIMEH: Although the contents of our product literature have been prepared with the greatest care, lechnoswitch can accept no liability whatsoever for any direct or indirect damages of any kind that may arise due to either errors or omissions in them or amendments to norducist or other specifications following nublication

Or Exchanged the Arthough the contents of our producing or other specifications following nublication.

